

Download App From : <https://www.tricorp.net.au/downloads>

STEP.1A

Setup an Inception user with Web Login Credentials & insure the user name in the General section of the user setup page (at the top of the user setup page) is exactly the same as the Web Login Username, see below (this Web User will be used by the app to gain access to the Inception Controller).

STEP.1B

For Web Profile Select “REST Web API User”

STEP.1C

To start with give this user Installer permissions & you can create its own permissions group later.

The screenshot displays the user setup interface, divided into three main sections: General, Credentials, and Permissions.

General Section:

- Name: devuser
- Notes: (empty text area)

Credentials Section:

- Security PIN: (empty field)
- Credentials: Table with columns Credential Template, Credential Number, and State.
- Two-Factor Authentication (2FA) Configuration: Not Enrolled
- Remote Fobs: Table with columns Remote Fob Template and Serial Number.
- LCD Terminal Profile: System Administrator
- Enable Web Login:
- Username: devuser
- Password: (masked with asterisks)
- Web Page Profile: REST Web API User

Permissions Section:

- Permissions: Table with columns Allowed, What, and Permission Group.
- Use Extended Unlock Times:
- Permanently Add to SLAM Cache:

STEP.2A

Setup a second Inception user with Web Login Credentials & again insure the name in the General section of the user setup (at the top of the page) is exactly the same as the Web Login Username (this user will allow you to login to edit mode on the app & to create an interactive site plan).

STEP.2B

Create a LCD Terminal Profile called **Windows Application** by Duplicating the Basic User Profile & renaming it to **Windows Application**

STEP.2C

Setup the second user with this newly created **Windows Application** LCD Terminal Profile


NOTE

Unlike the first Web User, this Web User doesn't require any permission's to be setup, however this user must have the LCD terminal Profile section set to **Windows Application** (see below).

The screenshot displays a user configuration interface with the following sections and fields:

- General**: Name: joe2; Notes: (empty text area)
- Photo**: (empty photo area)
- Credentials**:
 - Security PIN: (empty field)
 - Credentials: Table with columns: Credential Template, Credential Number, State. Includes 'Add Items' and 'Remove Selected Items' buttons.
 - Two-Factor Authentication (2FA) Configuration: Not Enrolled. Includes 'Add Items' and 'Remove Selected Items' buttons.
 - Remote Fobs: Table with columns: Remote Fob Template, Serial Number. Includes 'Add Items' and 'Remove Selected Items' buttons.
 - LCD Terminal Profile: Windows Application (selected from dropdown)
 - Enable Web Login:
 - Username: joe2
 - Password: *****
 - Web Page Profile: Control and User Admin (selected from dropdown)
 - Email Address: (empty field)
 - Linked SkyCommand App User: (empty field)

Once you have installed the app you will need to do some minor configurations when first run it.

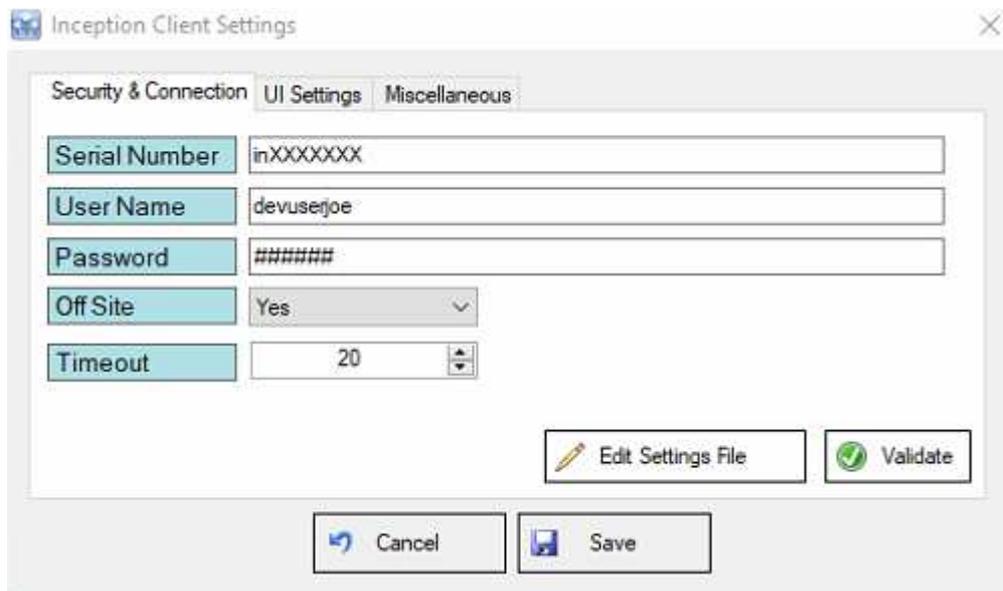

Enter the Inception's Serial number: INxxxxxxxx

Enter the User Name of the first user you created: devuser (example only)

Enter the Password of the first user you created: 112233 (example only)

Off Site = Yes or No (This is so you can connect to your Inception either locally or across the internet using Sky Tunnel).

Then click on validate & if your info is correct it will say "Success" & then click on save.



Now click on License Tab & enter the text string below (If Installation key below has expired please send an email to info@tricorp.net.au & I will send you a new license key);

71dfrHBCnseOx/tXDglaVS91K2HpD5FhKJyLUXA5WVwQ05jPUAA/H3zLS0VltjrhOohUYZt4eSS4JpBmaqCGMOFbnLvBWXEIKk8DNIok17NTRWqiqnu2livrzbzy3KdQPJ4vXSJRMfl1J6Jv5bBBi4oR0sqQtRh5a7NBSU8ErTnCAbaRe9H3oUKuxE2timWwqaTJ5zeXwZx0uSrvB6DCFU25FgpXx5oNVmEELPKhEDUIDW76n+pZ8ySx/2bjWcVqzi7JdFD00IE7IlgYyKwJsofKs1HOfI3K/oHomLntd4X5VHpLlyu59e3KalAvdZO

